



MACHINE USE FROM THE PLATFORM CONTROL BOX

N.B.: The Activ/Screen automatically goes into standby if it is not used for an extended period. To switch the Activ/Screen back on, press the emergency stop button then follow the start-up procedure.

- 5 Power OFF: From the ground control box, turn the key to the 0 position.

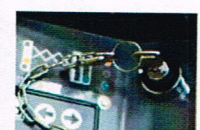

INFORMATION - INDICATORS

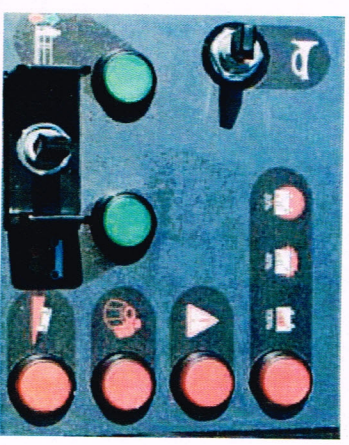

EMERGENCY STOP


Push the Emergency Stop button to immediately stop all movements of the machine.



FAMILIARIZATION GUIDE



- 2 Ground control box: turn the key to the platform control position.

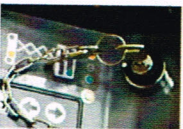



- 3 Driving, Lifting: push the selector to the right to activate drive or to the left to operate mast extension/retraction. Press the joystick trigger (2) and move the joystick in the desired direction.



- 4 Steering: press the steering button (steering rocker) (1) in the desired direction. All movements: press the joystick trigger (2) and move the joystick in the desired direction.



EXTENSION DECK (IF MACHINE EQUIPPED)

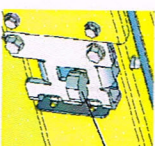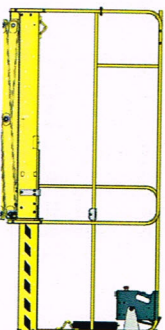

Make sure that the extension deck is in locked position.

Press the pedal (1) to release the extension deck lock pin.

With pedal (1) pressed, push the extension deck guard rails to the extended position.

To retract the extension deck, press pedal and pull the extension deck rails inwards to the locked position. Release the pedal.



Horn



Battery charge indicator:

Batteries charged

Flashing: 40% charge remaining

Constantly lit: 20% charge remaining
Recharge the batteries



 
Machine fault indicator



Platform overload indicator



Tilt indicator



! This is only a familiarization guide. It is mandatory to read the operator manual, do a worksite risk assessment to verify the suitability of the machine for the work to be performed in relation to the site and to carry out the inspection of the machine before use.




A diagram of a yellow scissor lift. A large red arrow points upwards towards the base of the lift, indicating the location of the hydraulic pump.


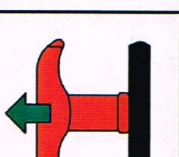
-


- 




 This is only a familiarization guide. It is mandatory to read the operator manual, do a worksite risk assessment to verify the suitability of the machine for the work to be performed in relation to the site and to carry out the inspection of the machine before use.





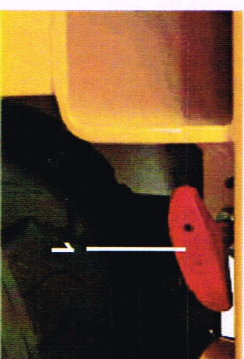

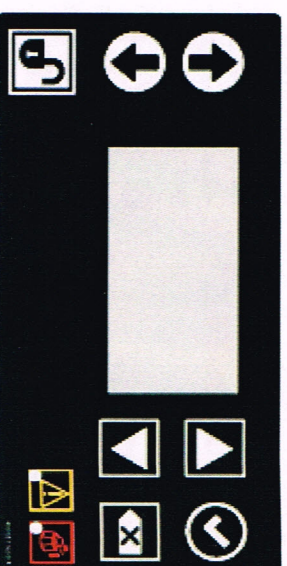


-

<h1>PROCEDURE</h1>	 
--------------------	---



HAULOTTE ACTIV'SCREEN



- | | |
|--|----------------------------------|
|  | Mast lifting |
|  | Mast retraction |
|  | Enable switch |
|  | Navigate up |
|  | Navigate down |
|  | Cancel a selection |
|  | Validate a selection in the menu |
|  | Machine fault indicator |
|  | Overload indicator |